

USER'S MANUAL



Operation Instruction

Thank you for purchasing this learnable universal remote control. Your new remote control has a stylish design and attractive surface. It contains one of the largest infrared code library obtainable in market for 4 different devices.

For preprogrammed code, all you have to do is to choose the device which you wish to control (for example Projector) and it's 3-digit code number from the brand code list (for example 012 under Optoma Projector). After you set up it will remember all your set up data permanently even you remove the batteries later.

The 4 in 1 universal remote control is suitable for practically almost all common brands of DLP Projector, television set (TV), DVD player (DVD), amplifiers(AMP). It can operate all main functions of your device.

This remote control can "learn" a new code from a original remote control to supplement the codes in case of it's shortage.

"Write-protection of Device Codes" can protect the device codes from being inadvertently overwritten or deleted

Please read this manual book carefully before you start operate your new remote control.

Realize the Buttons



SET—For you start to set up the remote control.

PROJECTOR、AMP、DVD、TV—Let you select the device you want to control.

—Turns the device on and off .

0-9—The number keys operate the same as on your original remote control, and maybe also used for entering device codes when set up.

Keystone ±—Keystone correction increment with decrement. (Projector)

Zoom±—Zoom increment with decrement.(Projector)

Source—Input source selection when OSD off.(Projector)

BLANK MODE—Display blank.(Projector)

RESYNC— Auto adjustment for phase, tracking.size,position when OSD off.(Projector)

LEARN— For you start to learn the remote control.

MENU—Works like the Menu or OSD (on-screen display) or Memory key on your original remote control.

CH±—Works like the Channel Up and Down keys on your original remote control.

VOL±—Control the volume like the Volume Up and Down on your original remote control.

Mute /OFF To mute the sound or power off.

 **REW** (fast reverse)

 **PLAY** (operate your DVD, CD etc)

 **FFWD** (fast forward)

 **REC** (Record)

 **STOP** (terminate your operation)

 **PAUSE**

    **ENTER, EXIT** Works like the UP , DOWN , LEFT ,

RIGHT , ENTER , EXIT Keys on your original remote control for menu function.

RED , GREEN , YELLOW and BLUE: for TV Fast Text.

Battery Installation

This remote control needs 2 AAA batteries to work with. Fresh Alkaline batteries are recommended. To install the batteries:

1. Turn the remote back, and lift the battery cover off.
2. Insert the batteries, matching the batteries to the (+) and (-) marks inside the battery compartment.
3. Slide the battery cover back into place.

All data you have set up into the unit will be stored in memory even you take off the batteries, but you may need to set the clock again.

Set Up

A. Set up by Brand Code:

1. Switch on the device, which you would like to control (e.g. Projector set).
2. In the **back section** of this manual, find the brand name and code no of your device brand (e.g. Optoma 012, 013, 014...).
Note: the codes must be in the column for the corresponding device group.
3. Hold down the **SET** key and actuate the device key (e.g. Projector) at the same time.
The **POWER** key on your remote control lights up, that means it is in the setting up mode.
4. You must now enter the 3-digit device code (e.g. 012 for Optoma Projector) within 10 seconds. If no entry within 10 seconds, the setting up mode is automatically terminated.

- 5.The LED goes out if the code has been accepted by the remote control. If the LED flashes twice, that means the code may be wrong, and the remote control remains in set-up mode, you should enter the correct code from the list again in time.
- 6.Check the function of the keys on remote control. If most keys on your new remote control do not function correctly, try another 3-digit device code (e.g. 013...) from the list under the same brand. Repeat steps 3 to 6 until all the basic functions operate correctly. Once you satisfy the code, that means you have already got correct set up for the device.

Remark:

- 1.To leave set up mode, press the device key (e.g. Projector). Or if you do not actuate any keys within 10 seconds it will be automatically terminated.
- 2.You may have set up more than one device on the new remote control.
Before you operate your new remote control, please press the requested device key first (e.g. Projector), so the remote control is surely at the proper device status, otherwise it may control the wrong device which is not you're requested.

B. Set up by Learning

The LEARN function is used to supplement the preprogrammed codes. The standard code list may provide most of functions needed, but you can add a small number of additional functions on it. Or you can add a new code from a original remote control which is shortage in the code list.


In learn mode, you must prepare a another original remote control where you will take codes from.

Please use fresh batteries for both the Learning Remote Control and the Original Remote Control.

- 1.Press down and hold the **Learn** key and press the device that you want to learn(e.g. DVD), then release the both pressed keys. The POWER button on your new remote control blinks and then the remote control is in learning mode for DVD codes.
2. Press and release the target button that you want to learn to (e.g.POwer), the device button lights up.
3. Point the original remote control to the receiver LED(as the same as it's transmitter LED) on your new remote control, both remotes facing each other by approximately 30mm apart.
4. Press and hold the source button on your original remote control (e.g.POwer) until the LED on your new remote control blinks 2 times and lights up 2 seconds, then blinks again. (That means you have learnt POWER signal from the original remote, and your new remote control is in learning again for next learning.)

If there is a learning problem, the light blinks 4 times and lights up for 2 seconds then blinks. (That means you failed to learn POWER signal from the original remote, and your new remote control is in learning again for next learning.)

5.Repeat Steps 2 to 4 to learn more buttons.

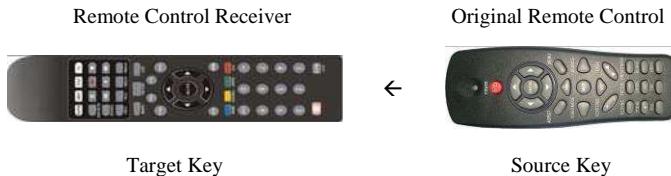

Remark:

1. If you want exit the learning mode, Press and release LEARN key.
2. In learning mode you must not be more than 30 mm between 2 remotes., and the 2 remotes must be put in a straight line.
3. It will exit the learning mode if you don't press any keys in 30 seconds .
4. You can press SET and 4 together to delete all buttons you have learnt under the device button, the LED will flash 2 times to confirm it.(First choose the device button which you like to delete)
6. The last learnt singal will overwrite the previous signal.
7. About 14 commands can be stored in this remote control .The last learnt signal will overwaite previous signal stored in that device and button.

Other Functions**A. Display the Device Code:**

The device code, which has been set up in your new remote control, can be called up as follows:

- 1.Press the SET key and hold it down, now actuate number key “1” to display the 100th position of the 3-digit code. Count the numbers the LED flashes. If the LED doesn't flash, that means the digit is ZERO.
- 2.Similarly, press the SET key and hold it down, at the same time actuate number key “2” to display the 10th position of the 3-digit code.
3. Press the SET key and hold it down, at the same time actuate number key “3” to display the 1st position of 3-digit code.

Example for Code 028:

- a. Press SET and “1”, LED flashes 0 time, no flashes.
- b. Press SET and “2”, LED flashes 2 times.
- c. Press SET and “3”, LED flashes 8 times.

B. Reset / Delete Function:

To delete the codes which have been set up in the remote control, press and hold down the SET key, then press the “0”key simultaneously for more than 3 seconds and then release the both pressed keys. The LED will flash twice and all the set up data and all learn commands in the remote control are deleted.

Remark: Please don't operate this function if you don't want to delete all the settings.

C. Write-protection of Device Codes:

To protect the device codes from being inadvertently overwritten / deleted, you can carry out the following:

1. Press the device key (e.g. Projector) that you would like to protect on your remote control.
2. Press and hold down the SET key and press the “7” key at the same time. Then release the both pressed keys, the LED will flash twice and the code is then protected from being overwritten/deleted.

Remark: To cancel write protection, press the SET key and hold it down, and activate the “8” key at the same time, and then release the both pressed keys. The LED flashes twice and the protection have been cancelled.

Device Brand Code List**Projector**

BRAND	CODE	MODEL
OPTOMA	012	DN346, DN362, DN364, DN861, DN961, DP336, DP352, DP354, DP851, DS309, DS309i, DS316, DW318, DX319, DX319p, DX609, DX609i, DX609v, EH1020, EP620, EP720, EP721, EP723, EP723mx, EP726, EP727, EP727i, EP727mx, EP728, EP728i, EP728mx, ES526, ES526L, EW531, EW533ST, EW536, EW628, EW1610, EX355, EX526, EX531, EX531p, EX536, EX536L, EX536v, EX538, EX540, EX540i, EX540i(3D), EX542, EX542i, EX542i(3D), EX612, EX615, EX762, EX765w, EW766w, GT720, HD66, HW536, HW628, OP280w, OP300w, OP380w, OP400w, OP1122, OP1126, OP1230, OP1260, OPS2610, OPX250, OPX2300, OPX2510, OPX2610, OPX2800, OPX3000, OPX3800, OPX4010, PRO100s, PRO150s, PRO200x, PRO250x, PRO350w, RS528, PW2300, PW2500o, S22, S22E, S28, TH1020, TS526, TS721, TS723, TX536, TX542, TX542i, TX728, TX762, TX765w, (ACCO)TX727, WX27o, WX28, X22c(ACCO), X25, X28, (COMPACT)228, EW533ST, GT720
OPTOMA	013	(COMPACT)218, CP705, DP7249, DS302, DS303, DX602, DX625, DX670, DX733, EP706, EP706s, EP708, EP708e, EP708s, EP709, EP709s, EP712, EP712e, EP719h, EP749, EP990s, FS704, KX700, S17e, SP7600, TX800, X17e, X25c
OPTOMA	014	DV10
OPTOMA	015	DV11, DVD100, U2, U3
OPTOMA	016	EP776, EP782, EP776w, EP782w, EP1080, OPX4100, OPX4800, TX776, TX782, TX776w, TX778w, TX782w
OPTOMA	017	ET700xe, GT7000, HD32, HD65, HD65a, HD70, HD71, HD75, HD700x
OPTOMA	018	HD31
OPTOMA	019	DP7259, EP716b, EP716c, EP739, EP739h, EP770
OPTOMA	021	DS305, DS305r, DX605, DX605r, EP716, EP716a, EP716mx, EP716p, EP716r, EP719, EP719p, EP719r, EP738mx, EP7161, S16e, TD306, TD316, TS400, TX700, X20e, UNEEC706
OPTOMA	022	HD6800, HD72, HD72i, HD73
OPTOMA	023	HD80, HD82, HD8200
OPTOMA	024	HD81, HD81-LV, HD3000
OPTOMA	025	DX608, EP747, EP773, EP780, EP781, EP1690, OP1140, OP1280, OP1400, T20, T203, TX773, TX780
OPTOMA	030	HD20, HD20LV, HD22, HD67, HD200x, HD2200, IS800c
OPTOMA	036	EP729
OPTOMA	027	COMPACT215, EP7150
ACER	002	001, H5360, H7530, H7530d, P1100, P1100c, P1165, P1166, P1166p, P1200, P1200a, P1200b, P1200n, P1200i, P1203, P1206, P1265, P1265p, P1265k, P1265ki, P1266, P1266i, P1266n, P1266p, P1270, P1300wb, P1303w, P3150, P3151, P3250, P3251, P5260, P5260i, P5270, P5280, P5370w,

		P7270,P7270i,P7280,P7290,S1200,X1160pz,X1161,X1260p,X1261
ACER	027	P5260,P5260i,P5271i,P7270,P7270i,,P7280,P7290,PD99s,PD99x,PD311,PD323,PD523pd,PD525pd,PD525pw,PD527d,PD527w,PD528,PD726,PD726w,PD727,PD727w,PW730,XD1150,XD1150d,XD1150p,XD1170d,XD1250,XD1250p,XD1270d,XD1280d
ACER	032	H5350,H5360,X1160,X1160+,X1160p,X1160pz,X1160pz,X1160z,X1260,X1260k,X1260p,X1260t
ACER	035	PD100,PD100d,PD100p,PD100s,PD116,PD120,PD120d,PD120p,PD120pd,PD322,PD523,PD525d
ACER	039	P1100c,P1200a,P1200b,P1200i,P1200n,P1300wb
DELL	026	1209s,1409x,1609wx,1800mp,2300mp,2400mp,3400mp,3400p,4100mp,4210x,4310wx,4610x,7609wu,1209S,M209x,M210x,M409wx,M410hd,
DELL	033	1210s,1410x,1510x,1610hd
DELL	043	2300mp
DELL	044	S300,S300w,S300wi
3M	013	SCP720
3M	020	DMS715,SCP715,SCP717,SCP740
ACCO	037	X20p
BENQ	001	MP771
CASIO	011	YT35,XJ-S57
CASIO	021	XL300
CHANGHONG	021	PDF270,PDF270x,PDF720p
EPSON	006	001, EMP-1715
EPSON	010	EMP1705,EMP1725
GAHA	021	COMPACT216,COMPACT218
HITACHI	004	CP-X200,CP-X205,CP-X300,CP-X305,CP-X308,CP-X400,CP-X417,ED-X30,ED-X31,ED-X33
HP	003	AP0110
HP	009	ARES,ARES-a,ARES-b,MP2210,MP2215,MP2220,MP2225,MP3320,MP3322
INFOCUS	040	IN1100,IN1102,IN3102,IN3104,IN3106,IN3108,IN3182,IN3186,IN3188,IN3902LB,IN3904LB,IN5302,IN5302L,IN5304,IN5304L,IN5502,IN5502L,IN5504,IN5504L,IN5532,IN5532L,IN5534,IN5534L,IN5584,IN5588,LP85,LP85w,SP8602,IN81,IN81c,IN82,IN83,X10,X10c
INFOCUS	042	X6,X6c,X7,X7c,X9,X9C,X15,X20,X21,X815
KAGA	038	U6-112,U6-132,U6-232
LENOVO	013	T20,T203
LENOVO	021	C10,DT1500
MEDION	017	MD30053
NEC	007	LT20
NEC	042	NP100,NP100+,NP100g,NP100j,NP200,NP200+,NP200g,NP200j
SAHARA	021	DP1500
SANYO	029	PDG-DSU30
SANYO	031	PDG-DWL100,PDG-DXL100
SMART	028	UF55,UF55W

SONY	008	VPL-CX63
THTF	042	DX680,DX710
TOSHIBA	034	TDP-SW80,TDP-TW90,TDP-TW90A,SP1,S8,MT200
ViewSonic	005	,001

TV

BRAND	TV
Abex	011,286
Accurian	140,452
Accuscan	005,014
Acme	156
Action	002,006,010,042
ADA	167
ADC	152,154
Admiral	003,004,005,014,015,018,025,035,040,041,055,165,308,455
Advantz	049
Advent	030,080,087,094,101,238,326,456,457
Adventura	279
Adventuri	001
Adyson	011
Agma	030
Aiko	024
Aiwa	011,295,296,309
Akai	010,012,020,021,028,031,064,071,149,211,230,361,362,372,373,410,442
Alaron	037,040
Alba	011,012,045
Albatron	002
Alfide	064
Alleron	010,037,193
Amark	002,007,011,013,014,018,035,165
Ambassador	030,039
America Action	041
American High	001,021
Ampro	079
Amstrad	013,038,039
Amtron	001,041, 062
Anam	041
Anamnational	019, 062,150,169,184,293
AOC	002,006,010,011,012,013,041,042,151,152,155,159,264,280,288,341,429,439,461,476
Aomni	399
Apex	078,081,113,321,367,423
Apex Digital	033,042,078,081,083,113
Archer	002,165
Aspect	198
Astar	472
Asuka	045

Audinac	041
Audio-Technica	006
Audiovox	002,024,040,041,054,061,062,074,090,112,140,147,348,436 ,457
AUVIO	451,489
Aventura	038
Axion	147,281,454
Bang&Olufsen	291
Basicline	045
Baycrest	011,043
Baysonic	041
Beaumark	004,006,010,040
Belcor	006,010,151
Bell&Howell	003,018,025,032,040,133,191
BenQ	139,215,226,383,462
Bluesky	258,386
Boxlight	118
Bradford	041,062
Brick	013
Brockwood	006,010,020
Broksonic	002,013,039,041,046,055,142,253,315,320,458,459
Brokwood	151
Candle	010,013,020,043,151,155,279
Capehart	002,004,006,010,011,024,280
Carnivale	010
Carver	018,037
CCE	122
Celea	081
Celebrity	001,149
Celera	081
Centrios	274
Centurion	155
Cetronic	184
Changhong	033,081,083,087,321
Cinego	016
Cineral	024,054,258
Citek	011,014
Citizen	001,002,003,006,007,010,011,013,018,020,021,024,038,041 ,043,048,049,054,055,062,127,151,155,184,230,253
Civet	042
Clairtone	042, 159
Clarion	041
Classic	006,010,020,024,081,184,321
COBY	359,364,463,464
Color voice	156
Coloryme	004,005,006,010,011,014,018,021,151,155,156
Colt	006
Commercialsolutions	014,133

Concerto	020,151,155
Conic	006
Concierge	235
Contec	041,042, 052,159,184,062
Cornea	192
Craig	038,040,041,049,184,062
Crosley	001,010,018,026,038,041,044,
Crown	013,020,025,041,062,064,184
Crownmustang	064
CTX	165
Curtis Mathes	001,003,005,006,010,011,012,013,014,015,018,020,021,025 ,028,032,036,040,041,054,056,071,077,124,127,131,133,15 1,155,160,191,230,249,318,460
CXC	041,184,062
Cybervision	258
Daewoo	006,007,013,024,054,061,064,064,138,139,151,152,155,15 6,162,163,164,181,184,185,213,225,246,247,249,256,324
Dayton	024, 151,155
Daytron	006,010,011,013,020,024
Dell	006,122,134,172,251,390
Denon	012,019,028,060
Denstar	062
Diamond Vision	220,304,331
Digimate	346
Digistar	078,087,238,251,270,272,348,384,385
Digital Lifestyles	479
Digital Stream	453
Dimensia	133,133
Disney	253,265
Dukane	198,066
Dumont	003,004,006,011,041,151,235
Durabrand	002,006,038,041,055,120,253,262,290,307,370
Dwin	025,077,085
Dynasty	184
Dynex	421
Eaton	021
Electroband	001,042,149,159
Electrograph	138
Electrohome	001,006,010,011,013,020,030,031,032,042,052,150,151,155 ,167
Elektra	003,004,061
Elite	045
Elite Video	297
Emerald	006,039
Emerson	006,011,012,013,014,029,030,032,037,038,039,040,041,042 ,046,048,049,054,055,061,062,141,142,155,166,168,169,17 1,174,175,176,177,179,181,182,183,184,186,187,191,193,2

	49,253,282,290,304,309,310,313,315,325
Envision	006,010,011,013,092,151,155,341
Epson	097,100
ESA	038,071,290
Fisher	001,018,032,034,052,191,234,034
Flex Vision	074
Fortress	025
Fujitsu	040,043,067,091,105,193,297,338
Funai	001,013,038,040,041,062,141,184,193,290,309,325
Futuretec	184,062
Futuretech	041
Gateway	138,139,188
GE	001,005,006,008,010,012,014,015,019,021,049,054,077,12 4,131,133,144,150,151,155,160,167,186,194,218,232,245,1 90,317
Gemini	014
Gibralter	001,004,006,010,151,235
Go Video	116
Go Vision	147
Gold Star	005,006,010,011,013,014,018,020,052,106,151,152,155,197 ,213,264,309,316
Goodmans	050
GPX	040
Gradiente	017,020,037,151,238,262,344,389
Grandtec	480
Granprix	040
Granada	011
Grundig	064,067,072
Grundy	040,041,062,193
Grunpy	040,041
Guestvision	299
Gvision	337
Haier	078,120,139,307,380,409,432
Hallmark	006,040,041,044,046,151,155
Hannspree	132
Harley-Davidson	001,006,010,021,040,041,141
Harman/Kardon	018
Harvard	041,062
Hauppauge	403
Havermy	025
Heathkit	004
Helios	110
Hellokitty	054
Hewlett-Packard	336,465,481

Hikone	045
Himitsu	041,062,086
Hisense	078,209,284,345
Hitachi	001,003,004,005,011,012,013,014,015,018,019,020,028,031 ,040,042,052,066,123,141,151,155,198,199,200,254,255,25 7,282,309,334,437,448,482
Hyundai	103,110,369,466,467
ILO	259,290,298,351,357,362,408,413
IMA	006,040,041,046,062
InFocus	133
Infinity	018,314
Initial	259,357,357
Insignia	038,173,228,238,252,253,272,290,307,325,381,417,420,477
Integra	283
Inteq	004,028,235
Janeil	279
JBL	018
JC Penney	008,043,052,127,133,151,152,155,160,167,174,194,218,23 ,0232
JCB	001,149
Jensen	030,080,094,151,155,252
JIL	006,010
Jutan	006,010
JVC	010,017,018,019,052,076,170,199,203,204,206,257,266,29 7,311,327,434,449
Kamp	004,006,041,042
Kawasho	006,010,042,149,151,155
Kaypani	280
KEC	021,041
KEC0041	062
Kenmore	029
Kenwood	006,010,041,151,155
KLH	033,041,081,083
Kloss	009,010
Kloss Novabeam	205,279
KMC	002,011
Kogi	337
Konka	041,045,062,073,157,161,173,189,228,322
KTV	010,013,041,042,048,055,062,159,166,184,207
Kurazai	003
Lark	032
Lasonic	304,331
Legend	238
LG	002,006,010,018,020,021,052,106,107,128,151,152,155,19 2,197,213,251,263,264,309,316,392,483

Liquidvideo	273,281
Lloyd's	010,011,013,020,040,041,046,141
Lodenet	003,133,300
Loewe	027,018,305,485
Logik	003,020,040,041,046,133
Luce	195
Luxman	020,151,155
Lxi	001,003,004,005,006,007,008,009,010,011,012,013,014,015 ,017,018,019,020,021,025,026,029,032,033,034,035,036,03 8,040,048,077,127,133,151,155,160,191,232,309
Macy	013,043
Magnasonic	001,002,006,010,018,020,024,025,033,040,141,193
Magnavox	001,006,007,009,010,014,015,018,021,024,026,032,038,04 0,041,043,044,047,049,051,072,090,101,134,138,141,151,1 55,205,210,257,285,308,314,325,368,411
Majestic	003,004,133
Marantz	010,018,031,106,134,151,155,283
Matsui	013,020,039
Matsushita	015,047,063
Maxent	138,139,188
Medion	265,277,298
Megapower	002
Megatron	002,006,014,020,028,031,151,155,198
Mei	042, 159
Memorex	003,006,010,011,013,020,030,032,035,040,041,055,133,142 ,143,145,146,151,155,191,193,253,315,339,468
MGA	006,010,030,034,052,151,152,155,167,193,257
MGN Technology	006
Microgenius	030
Midland	004,005,006,011,013,014,015,020,077,133,160,194,232,235
Mintek	259
Minutz	008
Mitsubishi	006,010,025,030,032,034,099,111,126,151,152,155,167,193 ,257,261,415,418,426
Monivision	002,178
Montgomery Ward	003,133
Moteva	191,344
Motorola	015,018,019,025,030,150,165
MTC	006,010,011,013,020,021,024,041,042,049,127,151,152,155 ,159,230
Multitech	040,041,062
Multivision	216
Myron&Davis	306
NAD	006,020,033,036,127,151,155,286
NEC	003,006,010,014,020,031,035,037,059,114,137,150,151,152 ,155,156,257,283,474
Net TV	138,188,244
Newtech	020
Nexxtech	272,356

Nikei	184
Nikko	010,006,024,151,155
Nikkodo	006,010,024
Niko	376
Nishi	005,010
Norcent	078,095,185,196
Noshi	005
NTC	024,
Nyon	001
Olevia	130,353,374,375,387
Oncommand	299
Onking	184
Onwa	041,062,184
Optimus	003,006,010,011,013,020,025,030,032,035,036,041,047,063 ,141,145,146,275,286,
Optoma	132, 354
Optonica	025,035, 165
Orion	004,006,039,040,041,046,055,142,177,235,253,441
Pace	006,024
Palsonic	086
Panasonic (National)	001,005,009,010,015,018,019,033,046,047,063,129,145,14 6,150,194,207,275,276,323,332,405,475
Panda	072
Pausa	040
Paxonic	006,010,011,013,021
PCE	021,033,040
Penney	001,002,003,005,006,008,010,011,012,013,014,015,020,021 ,033,034,047,077,131
Philco	006,007,009,010,012,018,026,028,040,043,044,055,088,119 ,150,151,152,155,157,205,210,257,285
Philips	010,018,020,026,038,043,044,070,101,106,134,139,150,15 1,205,210,217,218,257,267,285,290,302,303,314,325,382,3 96,400,419,444,445
Philips Magnavox	018,134,285,303,308,314
Pilot	006,010,013,015,020,021,151
Pioneer	012,019,036,066,151,155,219,282,283,286,424,487
PIVA	358
Planar	339
Polaroid	081,110,173,252,278,284,348,371,468
Portland	002,006,011,013,024,054,151,152,155,249,
Precision	039,041,042,046,049,271
Price Club	230
Prima	030,080,087,094,238,270,272,348
Princeton	002,075
Princeton Graphics	075,165
Prism	015,019,047,194

Proscan	005,014,056,077,131,133,144,160,232,268,269,425
Proton	002,006,013, 054,056,151,155,221,280,287,342
Protron	346,388
Provieu	352,353
Pulsar	003,004,006,024,151,235
Pulser	006,024
Quartz	006,030
Quasar	003,009,015,018,019,035,047,063,145,146,150,194,207,27 5,276
Rabbit	014
Radio Shack	006,010,011,013,014,020,030,032,035,041,052,062,077,133 .141,143,151,155,183,184,190,191,275,309,317
RCA	001,005,006,008,012,014,015,018,023,025,035,066,077,08 5,121,124,131,133,135,144,148,150,151,152,155,160,167,1 90,194,222,223,225,227,232,236,245,248,268,269,282,288, 289,317,431,486
Realistic	002,003,006,010,011,013,014,020,030,032,035,041,052,062 .133,151,155,183,184,190,191,275,309
Replay TV	484
Rhapsody	042,159
Road Authority	049
Runco	003,004,010,021,059,235,283
Sampo	010,011,013,014,052,138,139,151,155,188,244,280
Samsung	004,006,010,011,013,014,018,019,020,021,032,052,056,071 .082,093,127,151,152,154,155,160,211,213,229,230,231,27 7,318,329,393,395,401,402,404,414,416
Samsux	012,013,155
Samtron	230
Sanky	006,010,012,013,021,048
Sansui	006,010,021,035,055,141,142,253,315,441,443,492
Santeca	294
Sanyo	001,014,018,022,029,032,034,038,052,055,089,118,138,151 .191,224,233,234,407,412,430
Saville	021
Sceptre	260,367
Scimitsu	006
Scotch	006,151,155
Scott	006,010,013,039,040,041,046,062,151,155,168,177,184,19 3
Sears	001,003,004,005,006,007,008,009,010,011,012,013,014,015 .017,018,019,020,021,025,026,029,032,033,034,035,036,03 8,040,048,052,077,109,127,133,141,151,155,160,191,193,2 01,230,232,234,290,320,325
Seimitsu	006
Selectron	078,349,350,490,491,492
Semp	333
Sharp	006,011,013,018,025,035,040,041,051,058,068,069,104,151 .153,155,165,201,242,243,308,406,438,478
Shengchia	025
Shivaki	006
Shogun	006,151

Siemens	011,028
Signature	003,010,014,025,035,039,040,044,133
Silver	006
Simpson	010,006,043,044
Singer	021,024
Solardrape	001,011
Sole	092
Sonic	159
Sony	001,004,017,030,032,098,141,149,158,208,319,391,394,39 7,446,447,471
Soundesign	006,020,040,041,043,062,151,155,184,193
Sova	335,360
Soyo	365,366,433
Spectra	304
Spectravision	006,033,034,040,043,301
Spectricon	002,011
Squareview	038,290
SR1740	032,038
SSS	006,041,062,151,184
Standard Components	045
Star Sight	202
Starlite	006,041,046,062
Sunbrite	427
Superscan	025,109,201,325
Supersonic	330
Supra	151,214
Supremacy	013,043,279
Supreme	001,149
SV1740	018
SVA	078,110,306
Sylvania	001,006,007,009,010,014,015,018,020,024,026,032,034,03 8,040,043,044,141,151,155,205,210,253,257,267,285,290,3 09,325,435
Symphonic	001,006,038,040,041,062,141,168,290,309,325
Syntax	130,353,374,375
Tandy	013,025,035,045,165
Tatung	001,002,012,015,019,139,150,298
Teac	029,032,034,049,069,072
Technics	015,018,019,047,194
Technisat	488
Technol Ace	040
Technovox	010
Techwood	002,015,019,020,021,047,151,155,194
Teknika	003,006,011,013,018,020,021,024,030,040,041,043,052,055 ,062,127,133,151,152,155,184,193,230,275,279
Telecaption	239
Telecolor	004
Telefunken	020,071
Telerent	133,003
Teleton	043

Tera	151,287
Tevion	298
Thomas	006,013,014,020,141
Thomson	014,133
TMK	006,020,039,041,046,151,155
Tnci	004
Tocom	033
Tomashi	049
Toshiba	021,028,030,032,033,035,036,052,063,096,102,123,125,12 7,128,136,137,191,230,239,241,257,275,283,312,318,320,3 28,422,440,473
Tosonic	042
Totevision	013,015
Toyomenka	006
Truetone	015,019,047
Trutech	355,363,378
TVS	055
Uher	006
Ultra	006,013,024
Unitech	013
Universal	008,014,218
Universum	011,029,037,039
V	109,115,138,139
Vidtech	151,152,155
View Sonic	066,108,109,115,138,188,342,377,469
Viking	279
Viore	347,428,442
Vivtor	199
Visio	109,115,138,139
Vizio	109,115,139,343,450
Vector Research	010
Victor	017
Vidikron	018
Vidtech	006
Viking	021
Wards	001,003,004,005,006,007,008,010,012,013,014,015,018,02 0,025,026,031,032,035,036,040,043,044,046,125,133,151,1 52,155,168,193,205,210,218,240
Waycon	033
Welton	006
Westinghouse	001,054,115,117,237,379
White-Westinghouse	040,046,054,055,061,117,213,225,249,309,340,470
World	041,046,054,055
XR 0680	003,026,032,038,040,041
Yamaha	006,010,084,097,151,152,155,275
Yorx	010
Zenith	001,003,004,006,010,013,014,024,025,028,029,038,039,05 5,071,123,128,141,142,151,155,180,181,192,198,202,212,2 35,249,250,253,262,308,309,311,314,315,316,318,398
Zonda	002,086

TV/VCR COMBOS

BRAND	TV	VCR
Broksonic	458	
Mitsubishi	415	495
Samsung		494
Sansui	443	
Sanyo		493

TV/ COMBOS

BRAND	TV
Akai	410
Audiovox	436
Sony	397

HD TV Set Top Boxes

Access	210
Airlink	211
Apex	225
Artec	212
Coship	221
Digital	220
GE	219
Go Video	168
Hitachi	181
Hughes	181,201
Insignia	216
LG	181,201
Magnavox	224
Mitsubishi	181
Motorola	174
Philips	181
Pioneer	163
Proscan	018
Radio Shack	215
RCA	018,195,213,214
Samsung	153

Sony	196
Sylvania	143
Toshiba	181,201
Winegard	217,218
Zenith	046, 222

DVD

BRAND	DVD
3D LAB	002,008,527,528
Accurian	023,024,034,039,047,094,101,539
Acesonic	300
Advent	195
Afreey	136
Aiwa	018
Akai	025,027,055,120,151,289,294,477
Alba	021,029
Allegro	031,127,312,540
Ames	147
Amw	192,193
Anaba	223
Anam	104
Apex	021,038,112,116,117,125,140,146,152,154, 169,188,206,482,483
Apex Digital	006,021,029,038,043,057
Arrgo	059,529
Aspire	202
Aspire Digital	093
Astar	282
A-Trend	118
Audiovox	023,029,065,071,072,194,298
Axion	023,065,194
B&K	237
Blaupunkt	029,146
Blue Parade	011
Blue Sky	021,025,134,305
Body Sonic	136
Bose	170
Boss	186

Boston Acoustic	051,119,226
Broksonic	025,051,541
California Audio Labs	001,531
Cavs	296
Celestial	057
Centrex	021
Centrios	039,161,194,217,251,252,256,257,258,259,261
Changhong	125
Cine Vision	031,045,054,127
Cinea	044
Cinego	091
Citbeh	264
Citizen	056,264,484
Clairtone	011
Classic	125,147,248
COBY	021,068,070,173,191,198,213,214,280,288,292,293,304,560
Concept	146
Conia	021
CPX	205,212
Craig	044
Creative	002,008
Criterion	160
Curtis Mathes	521
Curtis International	198,199
Cyber Home	041,053,059,060,118,207,242,523
Cyber Vision	108
Cytron	027,044,114
Daewoo	027,031,036,045,078,080,081,155,156,159,230
Denon	001,017,121,138,507
Denzel	144
Desay	093
Diamond Vision	172,175,215
Digital Max	102
Digitrex	021
Digix	203
Disney	022,086,168
DiVi Do	027
Drive	283

Dual	022,044,064,067,144,281
Durabrand	044,073,127,161,277,278,279
DVD 0932	003
DVD 1710	126
Eigervision	297
Electrohome	056
Elta	150,151
Emerson	022,031,042,127,167,168,208
Enterprise	031
Entivo	002,008
Esa	042,064
Farenheit	222
Fisher	135
Funai	022,042,088,167,168
Gateway	077,550
GE	004,029,040,130,146
General Electric	029
Gold Star	031,127
Go Video	012,028,029,031,032,035,045,066,069,077,087,129,142, 147,165,166,179,230,555
Go Vision	023,065
Gradiente	001,110,111,134
Greenhill	029,146
Grundig	008,027
Haaz	030,163
Haier	204
Harman/Kardon	143
Hitachi	011,012,020,082,113,129,137,144
Hiteker	021
HP	486
Humax	187
ILO	089,221,262
Infinity	136
Initial	029,146,262,276
Insignia	031,042,127,146,167,182,194,481,491
Integra	011,014
IRT	035
JBL	143

JMB	025
JVC	008,010,013,050,123,128,178,196,225,480,499,551,559
Jwin	116,172,174,291,534,536
Kawasaki	047,161
Kenwood	001,007,121,145
Kiss	144
KLH	029,057,075,112,146,183
Kloss	006
Konka	131,132,133,182
Koss	057,114,134
Kxd	173
Lasonic	014,163,215
Leeson	099
Lenoxx	073,151,201,278
Lexicon	500
LG	031,127,231,501,546
Linn	158
Liteon	062,077,094,177,179,221,241,462,548,552
Loewe	031
Logix	035
Magnasonic	022
Magnavox	002,008,019,022,042,123,167,168,189,190,228,238,239, 240,502,526,530,532,533,535
Malata	553
Marantz	002,008,022,123,127,139,240
Maxent	180,196
McIntosh	099
Memorex	025,044,086,247,299,474,506,514,519
Meridian	123
Microsoft	004,100,130
Microvision	186
Minato	033
Mintek	029,146
Mitsubishi	003,098,126,485
Mustek	147
Myron&Davis	224
NAD	031,127,149

Nakamichi	148
NEC	031,037,127
Nesa	029,146,224
Nexxtech	036,064,081,092,112,161,203,219,249,251,252,253,254, 260,261
Norcent	056,070,197,198,241
Onkyo	002,014,123,234,509,558
Optimus	011
Oppo	505
Orion	025,119
Oritron	134,257
Pacific	044
Palsonic	021
Panasonic	001,002,011,026,090,096,097,103,113,121,216,229,233, 471,490,520,544,557
Philco	030,048,109
Philips	002,008,019,022,046,084,085,123,134,139,167,168,228, 238,239,240,285,306,489,545,549
Philips Magnavox	008,123,139,238,239
Pianodisc	060
Pioneer	005,011,016,184,227,235,236,275,503,547
Piva	266
Polaroid	057,068,112,220,303
Polk Audio	008,123,240
Portland	036,151
Power Acoustik	290
Presidian	022,023,102
Proceed	021
Proline	134
Proscan	004,130,171
Prosonic	070
Protron	197
Pyle	185
Radio Shack	011,105,106,161,164,470
Radionette	031
RCA	004,011,029,058,074, 086,104,105,130,134,146,161,164,171,522,554
Realistic	011
Regent	201,277

Reoc	033,163
RIO	031,127
RJ Technology	267,286
Rosen	200
Rotel	013,128
Saba	106
Sampo	033,136
Samsung	001,012,032,055,066,129,165,166,210,287,478,479,488, 498
Sansui	025,119,226
Sanyo	022,025,052,088,135,161,181,476
Schneider	035
Schwaiger	033
Sears	119,167
Seg	144
Selectron	268,269,270,271,272,273,274
Semp	114
Sensory Science	077
Sharp	015,022,033,083,122,176,512,524
Sherwood	141,510
Shinco	146
Shinsonic	006,029,146
Slim Art	036
Sonic Blue	012,028,031,035,069
Sony	006,049,095,099,115,124,243,244,245,246,473,487,537, 538,543
Soundstorm	185,186
Sova	072,284
Sungale	214,218
Superscan	042,167
Supersonic	212
SV 1710	167
SVA	021,029,033
Sylvania	015,022,042,167,168,511,556
Symphonic	022,042,088,167,168
Tascam	128
Teac	011,029,127,161
Techa Digital	011

Technics	001,026,121
Techwood	008,149,263
Terapin	211
Tevion	030,044,064,114,160,162,163
Theta Digital	011
Thomson	004
Tiquidvideo	194
Tivo	184,187
Toshiba	002,008,012,025,061,076,123,232,295,301,373, 475,515,516,525,542
Tredex	209
Trutech	230,250,302
TYT	027
United	161
Universum	031
Urban Concepts	002,008
US Logic	029
V	063,079
Venturer	161
Visio	063,079
Vizio	063,079,513
Westinghouse	244
Wharfedale	136,157
White Westinghouse	168
X-Box	004,100,130
Xenius	114
Yamaha	001,008,009,155,238,239,504
Yamakawa	144,153,255
Zenith	002,031,123,127
Zeus	036
Others	107,265

Blue-ray DVD

BRAND	DVD
HP	486
Denon	507

Memorex	506
Onkyo	509
Oppo	505
Panasonic	490
Philips	489
Pioneer	503
Samsung	488
Sharp	512
Sherwood	510
Sony	487
Sylvania	511
Toshiba	515
Vizio	513
Yamaha	504

HD-DVD

BRAND	DVD
Panasonic	471
Toshiba	472

DVD-R

BRAND	DVD
California Audio Labs	531
COBY	560
Gateway	550
JVC	551,559
Liteon	552
Magnavox	530
Memorex	474
Panasonic	544,557
Philips	545,549
Pioneer	547
Sony	473,543
Toshiba	542

DVD/VCR COMBOS

BRAND	DVD	VCR

Allegro	540	
Broksonic	541	
LG	546	
Magnavox	530	
Panasonic	544	
Toshiba	516	492

DVR/PVR

BRAND	VCR
ABS	372
Alienware	372
Archos	517
AT&T	348
Cyber Power	372
Dell	372
Dish Network	497
DirecTV	372
Gateway	372
Hewlett Packard	372
Howard Computers	372
HP	372
Hughes	464
Hughes Network Systems	349
Humax	187,349,561
Hush	372
Ibuypower	372
LG	546
Linksys	372
Lorex	563
Media Center PC	372
Microsoft	372
Mind	372
Niveus Media	372
Northgate	372

Panasonic	113,348,372,472
Philips	349,440,441,455, 562
Polaroid	303
Pioneer	184,236
RCA	130
Replay TV	347,348
Samsung	349
Sonic Blue	347,348
Sony	244,245,246,351,372,456,463,465
Stack 9	372
Tagar Systems	372
Thomson	508
TiVo	184,187,349,351,373,440,441,455,456,465,496
Toshiba	355,372,373
Touch	372
View Sonic	372
Voodoo	372
Vudu	518
ZT Group	372

VCR

BRAND	VCR
ABS	372
Accele	445
Admiral	313,318,319,321,322,327,333,342,374
Adventura	307,336,339,372
Aiko	393
Aiwa	307,312,339,361,372,375,403
Akai	331,375,376,377,378,379,394,418,435
Alba	333
Alienware	372
Allegro	312,313,361,388,390,432
A Mark	307,336,372
American High	311,325,412
Amstrad	307
Apex	112
Archos	517
Asha	336,445
Astra	311,336
AT&T	348
Audio Dynamics	324,382,457

Audio-Technica	320
Audiovox	312,372
Avis	307
Beaumark	336,445
Bell&Howell	307,311,313,317,319,327,342, 402
Broksonic	119,226,308,328,333,342,369,385,392,395,396,410,422
Calix	312,372
Candle	312,372,382,386,387,389,445
Canon	311
Cannon	321,412,437
Capehart	308,322,432
Carrera	336
Carver	311,325,344
CCE	393,446
Cine Vision	312,361
Citizen	307,311,312,333,336,342,368,372,382,386,387,389,393,445
Classic	372
Colortyme	311,316,321,382
Colt	307,446
Craig	312,318,336,372,445,446
Criterion	307
Crosley	307,311,325,329
Curtis Mathes	307,311,321,330,336,340,341,344,358,375,382,391,412,434,445,448
Cybernex	336,445
Cyber Power	372
Daewoo	230,372,316,317,339,361,368,386,387,389,392,393,407,434
Daytron	372
DBX	324,382,457
DELL	372
Denon	314,325,420
Diamond vision	175
Dimensia	321
Directv	349
Dish Network	497
Dual	307
Durabrand	312,313
Dynatech	307,336,339,375
Eknika	312,339,375,412,429
Electrohome	307,312,315,321,333,336,372,394
Electrophonic	312,372
Emerald	328
Emerex	309
Emerson	167,168,307,308,312,315,328,332,333,336,339,342,346,368,369,370,372,375,379,381,385,386,391,392,393,394,395,396,397,398,399,400,401,402,403,404,410,411,412,416,422,429,433,438,445
ESA	361
Fisher	307,313,317,318,323,327,344,382,402,405,419
Fuji	310,311,377,412
Fujitsu	307
Funai	167,168,307,339,346,370,372,375
Garrard	307,339
Gateway	372

GE	307,311,319,321,329,332,336,352,358,406,412,423,423, 439,445
GE Homeminder	466
Gemini	321
Genexxa	307,372
Gold Star	307,311,312,313,343,361,366,372,375,382,432,436,442
Goodmans	307,322,325,372
Go Video	336,340,347,350,361, 129,142,166,230,445,453
Gradiente	307,312,339
Granada	314,325
Grundig	325
Harley-Davidson	307,339
Harman/Kardon	325,382,394
Harwood	446
Headquarter	317,402
Hewlett Packard	372
HL-Q	307,311,318
Hitachi	307,311,314,316,326,337,372,375,418,443,454
Home Automation	467
Howard Computers	372
HP	372
Hughes	464
Hughes Network Systems	314,349
Humax	187,349,561
Hush	372
Hytek	307,318
Ibuypower	372
Infinity	409
Insignia	031,312
Instant Replay	375,412
Inteq	312
ITT Nokia	336,337
Janeil	336
JC Penney	266,312,321,324,337,382,402,412,418,445,454,457
JCL	412
Jensen	324,418,454
JVC	050,178,320,324,364,382,390,402,418,457
KEC	372
Kenwood	317,324,382,402,418,457
KLH	446
Kodak	311,312,372,412
KTV	307
LG	031,312,336,343,361,372,375,432,436
Linksys	372
Liteon	462
Lloyd	339,375
Lloyd's	307,336
Loewe	325
Logik	307,336,446
Lorex	563
Luxor	317
LXI	307,312,314,324,372,375
Lutron	468

Magnasonic	307,336,346,368,372
Magnavox	167,189,228,307,311,313,319,321,325,329,336,344,346 ,349,370,371,372,374,375,383,408,409,412,432,433
Magnin	336,445
Marantz	311,322,324,325,344,382,402,410,412,437,457
Marta	312,372
Matsui	372,333
Matsushita	311,325,330,341,364,412
Medion	175
MEI	311,412
M Electronic	336
Media Center PC	372
Memorex	307,311,312,313,317,318,319,322,327,330,333,336,337 ,338,339,341,342,344,364,366,367,372,374,375,402,41 2,419,422,432,435,445
Metz	372
MGA	315,321,336,394,411
MGN Technology	336,441
Microsoft	372
Midland	336,406
Mind	372
Minolta	314,337,454
Mitsubishi	307,314,315,318,319,321,324,352,394,411,413,414,454 ,457,495
Montgomery Ward	374,415
Motorola	311,319,374,412
MTC	307,336,339,375,445
MTX	307
Multitech	307,313,375,339,406,445,446
NAD	320,327,336
NEC	324,327,382,391,402,410,416,417,418,457
Nexxtech	112,161,431
Nikko	312,372
Nikkodo	372
Nishi	336
Niveus Media	372
Noblex	336,445
Northgate	372
Olympus	311,327,330,412
Onkyo	334
Optimus	307,311,312,372,318,319,320,322,327,330,336,340,341 ,345,346,350,359,364,367,374,445,450
Optonica	322,415,445
Orion	307,308,327,328,333,336,342,369,395,422
Panama	311
Panasonic(National)	090,307,311,321,330,335,341,347,348,358,364,367,412 ,472
Penney	307,311,314,318,324,325,330,336,358,366,372
Pentax	314,337,382,454
Philco	307,312,321,325,333,342,344,383,412
Philips	167,307,311,316,319,322,325,330,333,344,348,349,360 ,408,409,412,440,441,455,458,461,562
Philips Magnavox	344,374,409
Pilot	312,372
Polaroid	303
Pioneer	266,275,314,320,324,325,330,420,454,457
Polaroid	112

Polk Audio	325
Portland	387,389
Presidian	370
Profitronic	336
Proscan	321,332
Protec	307,446
Pulsar	313,336,432
Pulser	336
Quarter	317,402
Quartz	311,317,318,402
Quasar	308,311,321,330,341,358,364,367,412
Radio Shack	307,311,312,372,317,318,319,321,322,323,327,330,336 ,337,338,339,350,364,374,375,394,402,412,415,435,43 9,445,450
Radix	312,372
Randex	312,372
RCA	130,307,311,312,314,316,319,320,321,329,332,336,337 ,350,352,358,376,406,412,421,423,424,425,426,439,44 5,454
Realistic	307,311,312,372,317,318,319,321,322,323,327,328,330 ,336,338,339,364,374,375, 394,402,412,415,435,445,450
Replaytv	347,348
Ricavision	372
Ricoh	444
Rio	127,312,361
Runco	313,432
Samsung	066,166,210,307,316,321,336,340,349,356,378,386,435 ,445,448,454,494
Samtron	336,445
Sanky	313,319,374,432
Sansui	119,226,307,308,324,333,336,342,369, 395,418,422,457
Sanyo	307,317,318,327,336,337,342,380,402,419,445,493
Scott	315,316,328,385,386,392,396,399,411,438
Sears	119,167,266,307,310,311,312,313,314,315,316,317,318, 319,320,321,323,324,327,330,333,337,344,366,372,402 ,405,412,454
Sharp	307,309,318,319,322,352,354,374,375,387,394,401,415 ,449,450
Shintom	307,313,336,377,444,446,447,454
Shogun	336,445
Siemens	327,372
Signature	307,311,317,319,321,323,329,342,372,375
Singer	336,372,412,446
Sonic Blue	347,348,361
Sonographe	317
Sony	115,307,309,310,311,317,318,324,351,357,365,372,377, 427,428,444,451,452,451,456,459,460
Soundmaster	307
Stack 9	372
STS	314,337,412,454
Superscan	167
SV1710	307
SVA	307
Sylvania	167,168,307,311,315,321,325,339,344,346,370,371,375 ,384,411,412
Symphonic	167,307,308,336,339,346,370,375,384
Systemax	372
Tagar Systems	372
Tandy	307,327,375,402

Tashiko	312
Tatung	307,319,324,325,418
Teac	307,324,339,375,418
Technics	307,311,330,372,412
Techwood	263
Teknika	307,311,372
Telecorder	336
Tevion	342
Thomas	307,308
Thomson	321,332,508
Tivo	349,351,373,455,456,496
TMK	307,336,391,416,445
Tnix	372
Tocom	336
Toshiba	061,123,307,315,316,322,323,333,336,344,353,355,363 ,372,373,386,411,438,448,454,492
Totevision	312,336,372,445
Touch	372
Trix	372
Trutech	230
Ultra	316
Unitech	336,445
Vector	316
Vector Research	324,328,382,386,457
Victor	324,457
Video concepts	316,324,382,386,394,435
Videomagic	372
Videosonic	307,336,445
View Sonic	372
Villain	307
Voodoo	372
Vudu	518
Wards	312,307,310,311,314,315,316,317,318,319,320,321,322 ,325,329,336,337,339,342,372,374,375,386,394,412,41 5,430,438,445,446,454
Wharfedale	346
White Westinghouse	307,333,342,375,407
World	308,333,342
X 10(NEC)	469
XR 0880	307,311,336,339,412,446
Yamaha	324,382,418,457
Zenith	307,310,312,313,324,333,342,361,362,369,372,374,375 ,377,380,388,390,393,401,409,422,432,436,443,444,44 8,453,457
ZT Group	372

AMP

BRAND	AMP
Bose	303
Carver	306
Curtis Mathes	300
Gold Star	001
Harman/Kardon	306
JVC	301
Left Coast	306
Marantz	306

Modulaire	296
Optimus	296,297,300,305
Philips	306
Pioneer	297,300,305
Polk Audio	306
Radio Shack	296
RCA	297,300,305
Realistic	296,297,299
Sony	304,307
Victor	301
Wards	197
Yamaha	298,302