

廠牌	型號	適用機型
KODAK	KLIC-3000 (FNP-80)	DC4800
	KLIC-5000 (FNP-60)	LS420, LS443, LS433, LS633, LS743, LS753,
	KLIC-5001	EasyShare DX6490, DX7440, DX7590, DX7630, EasyShare P712, P850, P880, EasyShare Z730, Z750, Z760,
	KLIC-7000	EasyShare LS755, LS755 Zoom,
	KLIC-7001	EasyShare M753, M320, M853, M763, M863, M893 IS, M1073 IS, EasyShare M340, M1063, EasyShare V550, V570, V610, V705, M341
	KLIC-7002	EasyShare V530, V603 Zoom,
	KLIC-7003	EasyShare V803, V1003, EasyShare M380, KODAK M420, Z-950。
	KLIC-7004 (FNP-50)	EasyShare V1233, V1253, V1073, V1273, M1033, M2008, M1093 IS, Playsport
	KLIC-7005 (FNP-40)	EasyShare C763,
	KLIC-7006 (Li-42B)	EasyShare M873, M883, M530
	KLIC-7700	EasyShare M550, M575, M580
	KLIC-8000	Z612, Z712 IS, Z812 IS, Z8612 IS,