

廠牌	型號	適用機型
	NP-33 / NP-55 / NP-66 NP-66H / NP-68 / NP-77 NP-98	CCD-20061, CCD-330E, CCD-334E, CCD-335E, CCD-35, CCD-366BR, CCD-380, CCD-390, CCD-400, CCD-50E, CCD-550, CCD-850, CCD-EB55, CCD-F1330, CCD-F150, CCD-F201, CCD-F250, CCD-F250E, CCD-F280, CCD-F288BR, CCD-F30, CCD-F300, CCD-F301, CCD-F302, CCD-F31, CCD-F32, CCD-F33, CCD-F330, CCD-F330E, CCD-F334E, CCD-F335, CCD-F34, CCD-F340, CCD-F35, CCD-F350, CCD-F350E, CCD-F355, CCD-F355E, CCD-F36, CCD-F360, CCD-F365, CCD-F370, CCD-F370E, CCD-F375E, CCD-F38, CCD-F380, CCD-F380E, CCD-F385, CCD-F385E, CCD-F388BR, CCD-F390, CCD-F390E, CCD-F40, CCD-F401, CCD-F402, CCD-F45, CCD-F450, CCD-F450E, CCD-F455, CCD-F455E, CCD-F46, CCD-F475, CCD-F50, CCD-F500, CCD-F500E, CCD-F501, CCD-F55, CCD-F550, CCD-F550E, CCD-F555, CCD-F555E, CCD-F56, CCD-F57, CCD-F70, CCD-F701, CCD-F72, CCD-F73, CCD-F75, CCD-F77, CCD-F900, CCD-FPKTRV8, CCD-FTR45, CCD-FTR55, CCD-FTR65, CCD-FTR75, CCD-FV01, CCD-FX200E, CCD-FX210, CCD-FX230, CCD-FX240, CCD-FX280E, CCD-FX3, CCD-FX300, CCD-FX300E, CCD-FX310, CCD-FX311, CCD-FX320, CCD-FX330, CCD-FX340, CCD-FX400, CCD-FX400E, CCD-FX410, CCD-FX410E, CCD-FX411, CCD-FX420, CCD-FX425, CCD-FX430, CCD-FX435, CCD-FX470, CCD-FX500, CCD-FX500E, CCD-FX510, CCD-FX510E, CCD-FX511, CCD-FX520, CCD-FX525, CCD-FX530, CCD-FX600, CCD-FX620, CCD-FX630, CCD-FX640, CCD-FX700, CCD-FX700E, CCD-FX710, CCD-FX720, CCD-FX730, CCD-FX730V, CCD-FX810, CCD-FX830VE, CCD-G100ST, CCD-GV200, CCD-GV300, CCD-GV300E, CCD-GV8, CCD-GV9, CCD-GV9E, CCD-GVU5, CCD-M7, CCD-M77, CCD-M7U, CCD-M7V, CCD-SC6E, CCD-SC8E, CCD-SP5, CCD-SP54, CCD-SP5G, CCD-SP5X, CCD-SP5Y, CCD-SP7, CCD-SP9, CCD-TR100, CCD-TR101, CCD-TR105, CCD-TR105E, CCD-TR150, CCD-TR2000, CCD-TR202, CCD-TR202E, CCD-TR21, CCD-TR23, CCD-TR250E, CCD-TR28, CCD-TR3, CCD-TR30, CCD-TR300, CCD-TR300E, CCD-TR303, CCD-TR305, CCD-TR305E, CCD-TR305, CCD-TR31, CCD-TR323, CCD-TR323E, CCD-TR33, CCD-TR330, CCD-TR333, CCD-TR333E, CCD-TR353E, CCD-TR36, CCD-TR380E, CCD-TR385E, CCD-TR4, CCD-TR40, CCD-TR400, CCD-TR44, CCD-TR45, CCD-TR450, CCD-TR45E, CCD-TR45WH, CCD-TR5, CCD-TR50, CCD-TR501E, CCD-TR502E, CCD-TR505, CCD-TR505K, CCD-TR50E, CCD-TR51, CCD-TR514, CCD-TR530, CCD-TR54, CCD-TR55, CCD-TR550, CCD-TR55E, CCD-TR57, CCD-TR580E, CCD-TR6, CCD-TR60, CCD-TR600, CCD-TR606E, CCD-TR60E, CCD-TR61, CCD-TR614, CCD-TR620E, CCD-TR64, CCD-TR65, CCD-TR66, CCD-TR67, CCD-TR7, CCD-TR70, CCD-TR700, CCD-TR705, CCD-TR705E, CCD-TR707, CCD-TR707E, CCD-TR70E, CCD-TR71, CCD-TR714, CCD-TR72, CCD-TR73, CCD-TR74, CCD-TR75, CCD-TR750, CCD-TR750E, CCD-TR75BR, CCD-TR75E, CCD-TR76, CCD-TR78, CCD-TR8, CCD-TR805, CCD-TR805E, CCD-TR808, CCD-TR81, CCD-TR814, CCD-TR82, CCD-TR83, CCD-TR84, CCD-TR86, CCD-TR88, CCD-TR880E, CCD-TR9, CCD-TR900, CCD-TR91, CCD-TR916, CCD-TR93, CCD-TR94, CCD-TR96, CCD-TR97, CCD-TR98, CCD-TR99, CD-TRV100, CCD-TRV108, CCD-TRV11, CCD-TRV112, CCD-TRV119, CCD-TRV12, CCD-TRV19, CCD-TRV21, CCD-TRV211, CCD-TRV212, CCD-TRV22, CCD-TRV29, CCD-TRV30, CCD-TRV31, CCD-TRV312, CCD-TRV32, CCD-TRV33, CCD-TRV37, CCD-TRV40, CCD-TRV512, CCD-TRV52, CCD-TRV53, CCD-TRV60, CCD-TRV70, CCD-TRV73, CCD-V101, CCD-V11, CCD-V2006i, CCD-V22, CCD-V301, CCD-V330E, CCD-V340E, CCD-V4, CCD-V401, CCD-V4330E, CCD-V500, CCD-V5000, CCD-V5000E, CCD-V55, CCD-V550, CCD-V600, CCD-V6000, CCD-V6000E, CCD-V600E, CCD-V601, CCD-V700, CCD-V700E, CCD-V701, CCD-V800, CCD-V800E, CCD-V801, CCD-V88, CCD-V88E, CCD-V9, CCD-V90, CCD-V900, CCD-V900E, CCD-V90E, CCD-V95E, CCD-V99, CCD-V9E, CCD-VX1, CCD-VX10, CCD-VX1E, CCD-VX3, EVC-9100, EVC-X7, GV-5K, MVC-2000, MVC-5000, XV-M30, XV-MH30,
	NP-FC11 / NP-FC10	DSC-V1, DSC-P2, DSC-P3, DSC-P5, DSC-P7, DSC-P8, DSC-P9, DSC-P10, DSC-P12, DSC-F77, DSC-F77A, DSC-FX77,
	NP-FE1	DSC-T7,
	NP-FR1	DSC-V3, DSC-F88, DSC-P100, DSC-P120, DSC-P150, DSC-P200, DSC-T30, DSC-T50, DSC-G1,
	NP-FT1	DSC-L1, DSC-M1, DSC-M2, DSC-T1, DSC-T11, DSC-T3, DSC-T33, DSC-T5, DSC-T9, DSC-T10,
	NP-FS10 / NP-FS11	DSC-P1, DSC-P20, DSC-P30, DSC-P50, DSC-F55V, DSC-F505V,
	NP-BG1	DSC-H3, DSC-H7, DSC-H9, DSC-H10, DSC-H50, DSC-N1, DSC-N2, DSC-T20, DSC-T100, DSC-W30, DSC-W35, DSC-W50, DSC-W55, DSC-W70, DSC-W80, DSC-W100, DSC-W200, DSC-W120, DSC-W130, DSC-W150, DSC-W170, DSC-W300, DSC-W110, DSC-W220, DSC-W230, DSC-W270, DSC-H20, DSC-W290, DSC-WX1, DSC-H20, DSC-HX5V, DSC-H55
	NP-BD1 / NP-FD1	DSC-T70, DSC-T200, DSC-T2, DSC-T300, DSC-T77, DSC-T500, DSC-T700, DSC-G3, DSC-T900, DSC-T90, TX1
	NP-BK1	DSC-S750, DSC-S780, DSC-W180, DSC-W190, Bloggie MHS-PM5
	NP-BN1	DSC-TX7, DSC-W310, DSC-W330, DSC-W350, DSC-W370, DSC-W380, DSC-TX5
	NP-FM500H	a900, a700, a200, a300, a350, a550, a500, a850
	NP-FM50/QM51/FM55H	Cyber-shot DSC-R1, DSC-F707, DSC-F717, DSC-F828, a100, A100, DSC-S30, DSC-S50, DSC-S70, DSC-S75, DSC-S85, MVC-CD200, MVC-CD250, MVC-CD300, MVC-CD350, MVC-CD400, MVC-CD500
SONY	NP-F330 / NP-F530 / NP-F550 NP-F570 / NP-F730 / NP-F750 NP-F770 / NP-F960 / NP-F970	CCD-TRV57, CCD-TRV57E, CCD-TRV58, CCD-TRV59, CCD-TRV59E, CCD-TRV615, CCD-TRV62, CCD-TRV63, CCD-TRV65, CCD-TRV66, CCD-TRV66E, CCD-TRV66K, CCD-TRV67, CCD-TRV67E, CCD-TRV68, CCD-TRV71, CCD-TRV715, CCD-TRV716, CCD-TRV72, CCD-TRV720, CCD-TRV75, CCD-TRV78, CCD-TRV78E, CCD-TRV80PK, CCD-TRV81, CCD-TRV815, CCD-TRV82, CCD-TRV85, CCD-TRV85K, CCD-TRV86PK, CCD-TRV87, CCD-TRV87E, CCD-TRV88, CCD-TRV90, CCD-TRV91, CCD-TRV92, CCD-TRV93, CCD-TRV930, CCD-TRV940, CCD-TRV94E, CCD-TRV95, CCD-TRV95E, CCD-TRV95K, CCD-TRV98, CCD-TRV98E, CCD-TRV99, DCM-M1, DCR-SC100, DCR-TR7000E, DCR-TR7100E, DCR-TR8000E, DCR-TR8100E, DCR-TRU47E, DCR-TRV103, DCR-TRV110, DCR-TRV110E, DCR-TRV110K, DCR-TRV120, DCR-TRV120E, DCR-TRV125E, DCR-TRV130, DCR-TRV130E, DCR-TRV203, DCR-TRV210, DCR-TRV210E, DCR-TRV220K, DCR-TRV310, DCR-TRV310E, DCR-TRV310K, DCR-TRV315, DCR-TRV320, DCR-TRV320E, DCR-TRV420E, DCR-TRV49E, DCR-TRV5, DCR-TRV510, DCR-TRV520, DCR-TRV520E, DCR-TRV525, DCR-TRV58E, DCR-TRV620E, DCR-TRV620K, DCR-TRV7, DCR-TRV720, DCR-TRV720E, DCR-TRV735K, DCR-TRV820, DCR-TRV820E, DCR-TRV820K, DCR-TRV9, DCR-TRV900, DCR-TRV900E, DCR-TRV935K, CR-TV900, DCR-TV900E, DCR-VX2000, DCR-VX2000E, DCR-VX2100, DCR-VX2100E, DCR-VX9000, DSR-200, DSR-300, DSR-PD100, DSR-PD100A, DSR-PD100AP, DSR-PD150, DSR-PD150P, DSR-PD170, DSR-PD170P, GV-A100, GV-A500, GV-A500E, GV-A700, GV-D200, GV-D300, GV-D800, GV-D900, HDR-FX1, HDR-FX1E, HVR-M10C, HVR-M10E, HVR-M10N, HVR-M10P, HVR-M10U, HVR-Z1C, HVR-Z1J, HVR-Z1U, MPK-DVF4, MVC-CD1000, MVC-FD73K, MVC-FD83K, MVC-FD88K, MVC-FDR1, MVC-FDR1E, MVC-FDR3, MVC-FDR3E, PLM-100, Q002-HDR1, VCL-ES06A, HDR-FX7, DCR-VX2100, HDR-FX1000, HVR-V1N, HVR-Z1N, ,
	NP-F330 / NP-F530 / NP-F550 NP-F570 / NP-F750 / NP-F770 NP-F930 / NP-F930/B / NP-F950 NP-F950/B / NP-F960 / NP-F970 NP-F970/B	CVX-V18NS, CVX-V18NSP, DCR-TR7000E, DCR-TR7100E, DCR-TR8000, DCR-TR8000E, DCR-TR8100E, DCR-TRV110E, DCR-TRV110K, DCR-TRV120E, DCR-TRV125E, DCR-TRV130E, DCR-TRV203, DCR-TRV210E, DCR-TRV220K, DCR-TRV310E, DCR-TRV310K, DCR-TRV320E, DCR-TRV420E, DCR-TRV49E, DCR-TRV520E, DCR-TRV58E, DCR-TRV620E, DCR-TRV620K, DCR-TRV720E, DCR-TRV735K, DCR-TRV820E, DCR-TRV820K, DCR-TRV900E, DCR-TRV935K, DCR-VX2000E, DCR-VX9000, DSR-PD100, DSR-PD100AP, DSR-PD150, DSR-PD150P, DSR-PD170, DSR-PD170P, GV-A100, GV-A700, GV-D200, GV-D300, GV-D800, GV-D900, HDR-FX1E, HDR-FX7, HDR-FX7E, HVL-20DW2, HVR-M10, HVR-M10C, HVR-M10E, HVR-M10N, HVR-M10P, HVR-M10U, HVR-Z1C, MPK-DVF4, MVC-FDR1, MVC-FDR1E, MVC-FDR3, MVC-FDR3E, PBD-D50, PBD-V30, PLM-100, PLM-50, UPX-2000,
	NP-FA50 / NP-FA70	DCR-DVD7, DCR-DVD7E, DCR-HC90, DCR-HC90/E, DCR-HC90ES, DCR-PC1000, DCR-PC1000/E, DCR-PC1000B, DCR-PC1000E, DCR-PC1000S,
	NP-FP30 / NP-FP50 / NP-FP60 NP-FP70 / NP-FP71 / NP-FP90	DCR-30, DCR-DVD103, DCR-DVD105, DCR-DVD105E, DCR-DVD202E, DCR-DVD203, DCR-DVD203E, DCR-DVD205, DCR-DVD205E, DCR-DVD305, DCR-DVD403, DCR-DVD403E, DCR-DVD404E, DCR-DVD405, DCR-DVD505, DCR-DVD505E, DCR-DVD602, DCR-DVD602E, DCR-DVD605E, DCR-DVD650, DCR-DVD650E, DCR-DVD653, DCR-DVD653E, DCR-DVD703, DCR-DVD703E, DCR-DVD705E, DCR-DVD755E, DCR-DVD803, DCR-DVD803E, DCR-DVD905E, DCR-DVD92, DCR-DVD92E, DCR-HC16, DCR-HC16E, DCR-HC17, DCR-HC17E, DCR-HC18, DCR-HC18E, DCR-HC19E, DCR-HC20, DCR-HC20E, DCR-HC21, DCR-HC21E, DCR-HC22E, DCR-HC23E, DCR-HC24E, DCR-HC30, DCR-HC30E, DCR-HC30G, DCR-HC30L, DCR-HC30S, DCR-HC32, DCR-HC32E, DCR-HC33E, DCR-HC35E, DCR-HC36E, DCR-HC39E, DCR-HC40, DCR-HC40E, DCR-HC40S, DCR-HC40W, DCR-HC41, DCR-HC42, DCR-HC42E, DCR-HC43E, DCR-HC44E, DCR-HC46E, DCR-HC65, DCR-HC85E, DCR-HC94E, DCR-HC36, DCR-HC46, DCR-HC96, HDR-HC3, DCR-SR100, DCR-SR60, DCR-SR80, DCR-DVD405, DCR-DVD505, DCR-DVD755, DCR-DVD805, DCR-DVD905,
	NP-FF50 / / NP-FF51 / NP-FF51S NP-FF70 / NP-FF71 / NP-FF71S	DCR-HC1000, DCR-HC1000E, DCR-IP1, DCR-IP1E, DCR-IP1K, DCR-IP200K, DCR-IP210, DCR-IP210E, DCR-IP220, DCR-IP220E, DCR-IP220K, DCR-IP45, DCR-IP45E, DCR-IP5, DCR-IP55, DCR-IP55E, DCR-IP5E, DCR-IP7, DCR-IP7BT, DCR-IP7E, DCR-PC106, DCR-PC106E, DCR-PC107, DCR-PC107E, DCR-PC108E, DCR-PC109, DCR-PC109E, DCR-PC350, DCR-PC350E,

NP-FS20 / NP-FS21 / NP-FS22 NP-FS30 / NP-FS31 / NP-FS33	DCR-PC1 , DCR-PC1E , DCR-PC2E , DCR-PC3 , DCR-PC3E , DCR-PC4E , DCR-PC5 , DCR-PC5E , DCR-PC5L , DCR-TRV1VE ,
NP-FM55H / NP-FM50 / NP-QM51 NP-FM70 / NP-QM71 / NP-FM90 NP-QM91	CCD-TRV106K , CCD-TRV108 , CCD-TRV108E , CCD-TRV116 , CCD-TRV118 , CCD-TRV126 , CCD-TRV128 , CCD-TRV138 , CCD-TRV208 , CCD-TRV208E , CCD-TRV218 , CCD-TRV218E , CCD-TRV228 , CCD-TRV228E , CCD-TRV238 , CCD-TRV238E , CCD-TRV308 , CCD-TRV318 , CCD-TRV328 , CCD-TRV338 , CCD-TRV408 , CCD-TRV408E , CCD-TRV418 , CCD-TRV418E , CCD-TRV428 , CCD-TRV428E , CCD-TRV438E , CCD-TRV608 , CCD-TRV730 , CCD-TRV740 , CCD-TRV748E , CCD-TRV96K , DCR-DVD100 , DCR-DVD100E , DCR-DVD101 , DCR-DVD101E , DCR-DVD200 , DCR-DVD200E , DCR-DVD201 , DCR-DVD201E , DCR-DVD300 , DCR-DVD301 , DCR-DVD91 , DCR-DVD91E , DCR-HC14 , DCR-HC14E , DCR-HC15 , DCR-HC15E , DCR-HC88 , DCR-PC100 , DCR-PC101 , DCR-PC101E , DCR-PC101K , DCR-PC103 , DCR-PC103E , DCR-PC104 , DCR-PC104E , DCR-PC105 , DCR-PC105E , DCR-PC105K , DCR-PC110 , DCR-PC110E , DCR-PC115 , DCR-PC115E , DCR-PC120 , DCR-PC120BT , DCR-PC120E , DCR-PC300K , DCR-PC330 , DCR-PC330E , DCR-PC6 , DCR-PC6E , DCR-PC8 , DCR-PC8E , DCR-PC9 , DCR-PC9E , DCR-TRV10 , DCR-TRV11 , DCR-TRV11E , DCR-TRV12E , DCR-TRV14 , DCR-TRV140 , DCR-TRV140E , DCR-TRV145 , DCR-TRV145E , DCR-TRV14E , DCR-TRV15 , DCR-TRV15E , DCR-TRV16 , DCR-TRV16E , DCR-TRV17 , DCR-TRV17E , DCR-TRV17K , DCR-TRV18 , DCR-TRV18E , DCR-TRV18K , DCR-TRV19 , DCR-TRV19E , DCR-TRV20 , DCR-TRV20E , DCR-TRV22 , DCR-TRV22E , DCR-TRV22K , DCR-TRV230 , DCR-TRV230E , DCR-TRV238 , DCR-TRV238E , DCR-TRV239E , DCR-TRV24 , DCR-TRV240 , DCR-TRV240E , DCR-TRV240K , DCR-TRV245 , DCR-TRV245E , DCR-TRV24E , DCR-TRV25 , DCR-TRV250 , DCR-TRV250E , DCR-TRV255 , DCR-TRV255E , DCR-TRV25E , DCR-TRV260 , DCR-TRV265 , DCR-TRV265E , DCR-TRV27 , DCR-TRV270E , DCR-TRV27E , DCR-TRV280 , DCR-TRV285E , DCR-TRV30 , DCR-TRV300K , DCR-TRV30E , DCR-TRV33 , DCR-TRV330 , DCR-TRV330E , DCR-TRV33E , DCR-TRV33K , DCR-TRV340 , DCR-TRV340E , DCR-TRV345E , DCR-TRV350 , DCR-TRV355 , DCR-TRV355E , DCR-TRV360 , DCR-TRV38 , DCR-TRV39 , DCR-TRV40E , DCR-TRV430E , DCR-TRV460 , DCR-TRV460E , DCR-TRV480 , DCR-TRV480E , DCR-TRV50 , DCR-TRV50E , DCR-TRV530 , DCR-TRV530E , DCR-TRV6 , DCR-TRV60 , DCR-TRV60E , DCR-TRV6E , DCR-TRV70 , DCR-TRV70K , DCR-TRV730 , DCR-TRV730E , DCR-TRV738E , DCR-TRV740 , DCR-TRV740E , DCR-TRV75E , DCR-TRV8 , DCR-TRV80 , DCR-TRV80E , DCR-TRV828E , DCR-TRV830 , DCR-TRV830E , DCR-TRV840 , DCR-TRV8K , DCR-TRV940E , DCR-TRV950 , DCR-TRV950E , DSR-PDX10 , HDR-HC1 , HVL-IRM , HVL-ML20M (Underwater Video Light) , MVC-CD250 , GV-D1000 , HDR-SR1 , HDR-UX1 , CCD-TRV126 , HVR-A1N ,
NP-FH50	DSC-HX1 , a380 , a 333 , HDR-TG1 , HDR-CX7K , HDR-UX5 , HDR-UX7 , HDR-UX20 , DCR-DVD508 , DCR-DVD808 , DCR-DVD908 , DCR-DVD810 , DCR-DVD308 , DCR-DVD508 , HDR-HC5 , HDR-HC7 , DCR-HC48 , HDR-HC9 , HDR-HC62 , HDR-SR5 , HDR-SR7 , HDR-SR8 , HDR-SR10 , HDR-SR11 , HDR-SR12 , DCR-SR62 , DCR-SR82 , DCR-SR65 , DCR-SR85 , DCR-SR200 , DCR-SR300 , DCR-SR220 , HDR-CX12 , HDR-XR100 , HDR-XR500V , HDR-XR520V , HDR-CX120 , DCR-SR87 , DCR-SX41 , DCR-SX60E , HDR-XR200 , HDR-XR520 , DCR-SR47 , hdr-cx100 , HDR-CX520V , HDR-CX500V , DCR-SR42E , HDR-TG5 ,
NP-FH60 / NP-FH50 / NP-FH70 NP-FH100	HDR-CX7K , HDR-UX5 , HDR-UX7 , HDR-UX20 , DCR-DVD508 , DCR-DVD808 , DCR-DVD908 , DCR-DVD810 , DCR-DVD308 , DCR-DVD508 , HDR-HC5 , HDR-HC7 , DCR-HC48 , HDR-HC9 , HDR-HC62 , HDR-SR5 , HDR-SR7 , HDR-SR8 , HDR-SR10 , HDR-SR11 , HDR-SR12 , DCR-SR62 , DCR-SR82 , DCR-SR65 , DCR-SR85 , DCR-SR200 , DCR-SR300 , DCR-SR220 , HDR-CX12 , HDR-XR100 , HDR-XR500V , HDR-XR520V , HDR-CX120 , DCR-SR87 , DCR-SX41 , DCR-SX60E , HDR-XR200 , HDR-XR520 , DCR-SR47 , hdr-cx100 , HDR-CX520V , HDR-CX500V , DCR-SR42E , HDR-TG5 ,