

| 廠牌 | 型號 | 適用機型 |
|------|-------------------------------------|---|
| BenQ | DC-X800 / DC-X835 (Casio NP-20) | DC-T700, DC-T800, DC-X720, DC-X725, DC-X735, DC-X800, DC-X835。 |
| | DC-E521 / DC-E610 (Casio NP-40) | DC-E520, DC-E520+, DC-E521, DC-E610, DC-P500。 |
| | DC-E605 / DC-E800 (FUJI NP-40) | DC-X600, DC-X710, DC-E510, DC-E600, DC-E605, DC-E800, E1020。 |
| | DC-E820 / DC-E1000 (Minolta NP-900) | DC-E43, DC-E53, DC-E53+, DC-E63+, DC-E720, DC-C500, DC-E50, DC-E820, DC-E1000。L1020 |
| | DLI-213 / DC-E1050 (KLIC-7001) | DLI-213, DC-E1050。L1050。E1220 |