

廠牌	型號	適用機型
Canon	BP-511 / BP-512	EOS D30, D60, 10D, 20D, 30D, 300D, 5D, 40D, 50D, PowerShot G1, G2, G3, G5, G6, Pro 1, Pro 90, Pro 90 IS, EOS Kiss Digital, EOS-Digital Rebel, MV30i, MVX3i, DM-MV100Xi, DM-MV30, DM-MV30i, DM-MV400, DM-MV400i, DM-MV430, DM-MV450, DM-MV450i, DM-MVX1i, F20, FV100, FV2, FV200, FV300, FV300 KIT, FV40, FV40 KIT, FV400, FV50, FVM10, MV-430iMC, MV300, MV300i, MV400, MV400i, MV430i, MV450i, MV500, MV500i, MV530i, MV550i, MV600, MV600i, MV630i, MV650i, MV700, MV700i, MV730i, MV750i, MVX100i, MVX150i, MVX2i, Optura 10, Optura 100MC, Optura 20, Optura 200MC, Optura 50MC, Optura Pi, Optura Xi, ZR-10, ZR-20, ZR-25, ZR-25MC, ZR-30, ZR-30MC, ZR-40, ZR-45MC, ZR-50MC, ZR-60, ZR-65MC, ZR-70MC, ZR-80, ZR-85, ZR-90, PV130, IXY DVM。
	NB-1LH	IXUS 200a, IXUS 300, IXUS 300a, IXUS 320, IXUS 400, IXUS 430, IXUS 500, IXUS V, IXUS V3, IXUS VII, IXY 200, IXY 200a, IXY 30, IXY 300, IXY 300a, IXY 320, IXY 400, IXY 430, IXY 450, IXY 500, IXY S200, IXY S230, IXY S330, PowerShot S100, S110, S200, S230, S300, S330, S400, S410, S500, S100 Digital ELPHS。
	BP-2L12 / BP-2L14 / BP-2L5 NB-2L / NB-2LH	EOS 350D, EOS 400D, Digital Rebel Xt, Digital Rebel Xti, EOS Digital N, EOS Kiss Digital N, EOS Digital Rebel XT, PowerShot S30, S40, S45, S50, S60, S70, S80, PowerShot G7, G9, FVM100, FVM100KIT, FVM20, FV500, FVM200, FVM30, MVX20i, MVX200, MVX200i, MVX250i, MVX25i, MVX30, MVX30i, MVX330i, MVX350i, MVX35i, MVX40, MVX45i, IXY DVM3, IXY DV3, IXY DV5, IXY DV5-BL, Elura 40 MC, Elura 50, Elura 60, Elura 65, Elura 70, Elura 80, Elura 85, Elura 90, M5V, M5i, MV5iMC, MV6iMC, MV800, MV830i, MV850i, MV880X, MV890, MV900, MV901, MV920, MV930, MV940, MV950, MV960, Optura 30, Optura 40, Optura 400, Optura 50, Optura 500, Optura 60, ZR200, ZR300, ZR400, ZR500, ZR600, ZR700, ZR100, ZR200, ZR300, PC1018, DV-FV M100 (JAN)。
	NB-3L	IXUS 700, IXUS 750, IXUS I, IXUS II, IXUS Iis, IXUS i5, IXY 30, IXY 30a, IXY 600, IXY 700, IXY L, IXY L2, DIGITAL ELPH, Powershot SD10, SD100, SD110, SD20, SD500, SD550。
	NB-4L	IXUS 30, IXUS 40, IXUS 50, IXUS 55, IXUS 60, IXUS 65, IXUS WIRELESS, IXUS i zoom, IXUS i7 zoom, IXUS 70, IXUS 75, IXUS 80 IS (PowerShot SD1100 IS), IXUS 100 IS, IXUS 110 IS, IXY WIRELESS, IXY 40, IXY 50, IXY 55, IXY 60, IXY L3, IXY L4, PowerShot SD30, SD40, SD400, SD430, SD450, SD600, SD630, SD200, SD300, PowerShot TX1, IXUS 120IS, IXUS 130, SD750, SD780, SD940, SD1000, SD1100
	NB-5L	IXUS 800 IS, IXUS 850 IS, IXUS 900 Ti, IXUS 950 IS, IXUS 860 IS, IXUS 960 IS, IXUS 85 IS, IXUS 90 IS, IXUS 970 IS, IXUS 870 IS, IXUS 980 IS, IXUS 990 IS, PowerShot SX200 IS, IXY 800 IS, IXY 900 IS, IXY 1000, IXY 810 IS, IXY 910 IS, IXY 2000 IS, IXY 820 IS, SD700 IS, SD800 IS, SD900, SD870IS, SD950 IS, SD890 IS, SD790, SD880, SD990
	NB-6L	IXUS 85 IS, IXY Digital 25 IS, IXUS 95 IS, PowerShot D10, IXUS 200 IS, PowerShot S90, IXUS 210, IXUS 105 IS
	NB-7L	PowerShot G10, G11
	NB-8L	PowerShot A3000 IS, PowerShot A3100 IS
	NB-5H	PowerShot A5, A5 Zoom, A50, D350, S10, S20,
	LP-E4	EOS 1D Mark III, EOS 1Ds Mark III, EOS-1D Mark IV
	LP-E5	EOS 450D, EOS Kiss X2, EOS 1000D, EOS Kiss F, EOS 500D,
	LP-E6 (須搭配專用充電器)	5D Mark II, EOS 7D
	LP-E8	550D
	BP-2L13	HV20
	BP-2L14	FVM100, FVM100KIT, FVM20, FV500, FVM200, FVM30, MVX20i, MVX200, MVX200i, MVX250i, MVX25i, MVX30, MVX30i, MVX330i, MVX350i, MVX35i, MVX40, MVX45i, IXY DVM3, IXY DV3, IXY DV5, IXY DV5-BL, Elura 40 MC, Elura 50, Elura 60, Elura 65, Elura 70, Elura 80, Elura 85, Elura 90, M5V, M5i, MV5iMC, MV6iMC, MV800, MV830i, MV850i, MV880X, MV890, MV900, MV901, MV920, MV930, MV940, MV950, MV960, Optura 30, Optura 40, Optura 400, Optura 50, Optura 500, Optura 60, ZR200, ZR300, ZR400, ZR500, ZR600, ZR700, ZR100, ZR200, ZR300, PC1018, DV-FV M100 (JAN)。
	BP-208	DC10, DC20, DC22, DC40, DC 51, DC95, DC100, DC 210, MVX1Si, MVX430, MVX450, MVX460, Elural 100, FVM300, IXY DV S1, Optura S1, iVIS DC22
	BP-310	HV10
	BP-308 / BP-308B / BP-308S BP-315	IXY DVM5, MVX4i, Optura 600,
	BP-406 / BP-412 / BP-422	DM-MV3, DM-MV3MC, DM-MV3i, DM-MV3iMC, DM-MV4, DM-MV4i, DM-MV4iMC, Elura 10, Elura 10MC, Elura 2, Elura 20, Elura 20MC, Elura 2MC, IXY DV, IXY DV2, IXY DVM2, IXY DVM2-V, MV3, MV3MC, MV3i, MV3iMC, MV4, MV4i, MV4iMC, MVX10i, Optura 300,
	BP-508 / BP-511 / BP-511A BP-512 / BP-514 / BP-522 BP-535	MV30i, MVX3i, DM-MV100Xi, DM-MV30, DM-MV30i, DM-MV400, DM-MV400i, DM-MV430, DM-MV450, DM-MV450i, DM-MVX1i, F20, FV100, FV2, FV200, FV300, FV300 KIT, FV40, FV40 KIT, FV400, FV50, FVM1, FV50, FVM10, MV-430iMC, MV300, MV300i, MV400, MV400i, MV430i, MV450i, MV500, MV500i, MV530i, MV550i, MV600, MV600i, MV630i, MV650i, MV700, MV700i, MV730i, MV750i, MVX100i, MVX150i, MVX2i, Optura 10, Optura 100MC, Optura 20, Optura 200MC, Optura 50MC, Optura Pi, Optura Xi, ZR-10, ZR-20, ZR-25, ZR-25MC, ZR-30, ZR-30MC, ZR-40, ZR-45MC, ZR-50MC, ZR-60, ZR-65MC, ZR-70MC, ZR-80, ZR-85, ZR-90, PV130, IXY DVM,
	BP-608 / BP-617	CV11, DV-MV100, DV-MV20i, ELURA, MV100, MV20, PV1, ZR,
	BP-808 (須搭配專用充電器)	FS100
	BP-819 (須搭配專用充電器)	iVIS HF10, iVIS HF100, HF S10, HF S100, HF20, HF200, iVIS HF S11
	BP-911 / BP-915 / BP-930 BP-945	C2, DM-MV1, DM-MV10, E1, E2, E30, E65AS, ES-300V, ES-4000, ES-410V, ES-420V, ES-50, ES-5000, ES-520A, ES-55, ES-60, ES-6000, ES-65, ES-6500, ES-6500V, ES-7000V, ES-7000es, ES-75, ES-8000, ES-8000V, ES-8100H18, ES-8100V, ES-8100V H18, ES-8200V, ES-8400V, ES-8600, FV1, FV500, G-1000, G-10Hi, G-1500, G10, G15Hi, G2000, G20Hi, G30Hi, G35Hi, G45Hi, GL-1, GL-2, MV1, MV10, MV100, MV10i, MV20, MV200, MV200i, Optura, UC-V10, UC-V100, UC-V10Hi, UC-V20, UC-V200, UC-V30Hi, UC-X1Hi, UC-X2, UC-X2Hi, UC-X30Hi, UC-X40Hi, UC-X45Hi, UC-X50Hi, UC-X55Hi, UCV10, UCV100, UCV20, UCV200, UCV300, UCV30Hi, UCX1Hi, UCX2, UCX2Hi, UCX30Hi, UCX40Hi, UCX45Hi, UCX50, UCX50Hi, UCX55Hi, Ultura, V-40, V-400, V-40Hi, V-420, V500, V50Hi, V520, V60Hi, V65Hi, V72, V75Hi, Vista, XH A1, XH G1, XL H1, XL1, XL1S, XL2, XL2 Body Kit, XM1, XM2, XV1, XV2, XL2,
	BP-950	XH A1, XH G1, XL H1,