

廠牌	型號	適用機型
Panasonic	DMW-BCA7/CGR-S001	DMC-F1 , DMC-FX1 , DMC-FX5 ,
	DMW-BM7/CGR-S002	DMC-FZ1 , DMC-FZ2 , DMC-FZ3 , DMC-FZ5 , DMC-FZ10 , DMC-FZ15 , DMC-FZ20 ,
	VW-VBA05/CGA-S003	SV-AS10 , SA-SA30 , SV-AV50 ,
	DMW-BCB7/CGA-S004(FNP-40)	DMC-FX2 , DMC-FX7 ,
	DMW-BCC12/CGA-S005E	DMC-FX3 , DMC-FX8 , DMC-FX9 , DMC-FX01 , DMC-FX07 , DMC-FX10 , DMC-FX12 , DMC-FX50 , DMC-FX100 , DMC-FX150 , DMC-FS1 , DMC-FS2 , DMC-LX1 , DMC-LX2 , DMC-LX9 , DMC-LX3 ,
	DMW-BMA7/CGA-S006E	DMC-FZ7 , DMC-FZ8 , DMC-FZ18 , DMC-FZ30 , DMC-FZ50 , DMC-FZ28 , DMC-FZ35
	DMW-BCD10/CGA-S007E	DMC-TZ1 , DMC-TZ2 , DMC-TZ3 , DMC-TZ4 , DMC-TZ5 , DMC-TZ11 , DMC-TZ15 , DMC-TZ50 ,
	DMW-BCE10/CGA-S008E/VW-VBJ10	Leica : C-Lux 3 , DMC-FX30 , DMC-FX33 , DMC-FX55 , DMC-FX35 , DMC-FS20 , DMC-FS3 , DMC-FS5 , DMC-FX500 , DMC-FX36 , DMC-FX520 , DMC-FX37 , DMC-FX38 , SDR-S26 , SDR-S15 , SDR-S7 , SDR-S9 , SDR-S10 , DMC-FX66
	DMW-BC7/CGA-S101E	DMC-F7 ,
	VW-VBA10/CGA-S301(FNP-60)	SV-AS30 , SV-AV10 , SV-AV100 , SV-AV20 , SV-AV25 , SV-AV30 , SV-AV35 , SV-PT1 ,
	DMW-BL14/CGR-S602	DMC-L1 , DMC-LC1 , DMC-LC5 , DMC-LC10 , DMC-LC40 , DMC-LC400 ,
	CGP-D28S / CGP-D28SE/1B / CGP-D320T1B CGR-D08 / CGR-D08A/1B / CGR-D08R CGR-D08S / CGR-D08SE/1B / CGR-D120 CGR-D120E/1B / CGR-D120E1B / CGR-D120T CGR-D16A/1B / CGR-D16S / CGR-D16SE/1B CGR-D210 / CGR-D220 / CGR-D220A/1B CGR-D220E1B / CGR-D28A/1B / CGR-D28S CGR-D320 / CGR-D320A/1B / CGR-D320E/1B VW-VBD21 / VW-VBD22 / VW-VBD25 VW-VBD33 / VW-VBD35 / VW-VBD40	AG-DV1DC , AG-DVC15 , AG-DVC30 , AG-DVC32 , AG-DVC60 , AG-DVC62 , AG-DVC7 , AG-DVX100 , AG-DVX1000 , AG-DVX100A , AG-DVX100B , AG-DVX100BE , AG-DVX102A , AG-DVX102B , AJ-PCS060G (Portable Hard Disk Unit) , DZ-MX5000 , NV-C2 , NV-C3 , NV-C5 , NV-C7 , NV-D89 , NV-DA1 , NV-DA1B , NV-DA1EG , NV-DA1EN , NV-DB1 , NV-DS11 , NV-DS11EN , NV-DS11ENA , NV-DS11ENC , NV-DS12 , NV-DS12B , NV-DS12EG , NV-DS15 , NV-DS150 , NV-DS150B , NV-DS15B , NV-DS15EG , NV-DS15EN , NV-DS15ENC , NV-DS200 , NV-DS25 , NV-DS25EG , NV-DS27 , NV-DS28 , NV-DS29 , NV-DS29EG , NV-DS3 , NV-DS30 , NV-DS30EG , NV-DS33 , NV-DS33EN , NV-DS35 , NV-DS37 , NV-DS38 , NV-DS38B , NV-DS38EG , NV-DS50 , NV-DS55 , NV-DS60 , NV-DS60EG , NV-DS65 , NV-DS65A-S , NV-DS65B , NV-DS65EG , NV-DS68 , NV-DS7 , NV-DS77/NW , NV-DS77 , NV-DS77B , NV-DS77EG , NV-DS77EN , NV-DS8 , NV-DS80K , NV-DS88 , NV-DS88K , NV-DS89 , NV-DS8EG , NV-DS9 , NV-DS99 , NV-DS990 , NV-DS990EG , NV-DS99EN , NV-EX1 , NV-EX1B , NV-EX1EG , NV-EX1EN , NV-EX21 , NV-EX21EG , NV-EX3 , NV-EX3EG , NV-GS1 , NV-GS11 , NV-GS15 , NV-GS15EG , NV-GS1B , NV-GS1EG , NV-GS3 , NV-GS33 , NV-GS3B , NV-GS3EG , NV-GS4 , NV-GS4B , NV-GS4EG , NV-GS5 , NV-GS5B , NV-GS5EG , NV-GS5K , NV-GS7K , NV-GX7 , NV-GX7EG , NV-GX7K , NV-M20 , NV-MD9000 , NV-MG3 , NV-MX1 , NV-MX1000 , NV-MX2 , NV-MX2000 , NV-MX2500 , NV-MX2EG , NV-MX300 , NV-MX3000 , NV-MX300A , NV-MX300EG , NV-MX340 , NV-MX350 , NV-MX350EG , NV-MX3A , NV-MX3EN , NV-MX5 , NV-MX500 , NV-MX5000 , NV-MX500B , NV-MX500EG , NV-MX7 , NV-MX7A , NV-MX7DEN , NV-MX8 , V-RX22EG , NV-RX33EG , NV-RX66EG , PV-BP8 , PV-DBP8 , PV-DBP8A , PV-DC152 , PV-DC252 , PV-DC352 , PV-DV100 , PV-DV100K , PV-DV101 , PV-DV102 , PV-DV103 , PV-DV121 , PV-DV151 , PV-DV200 , PV-DV200K , PV-DV201 , PV-DV201-K , PV-DV202 , PV-DV203 , PV-DV221 , PV-DV351 , PV-DV400 , PV-DV400K , PV-DV401 , PV-DV402 , PV-DV51 , PV-DV52 , PV-DV53 , PV-DV600 , PV-DV600K , PV-DV601 , PV-DV601D , PV-DV602 , PV-DV700 , PV-DV701 , PV-DV702 , PV-DV702K , PV-DV710 , PV-DV73 , PV-DV800 , PV-DV800K , PV-DV801 , PV-DV851 , PV-DV851D , PV-DV852 , PV-DV900 , PV-DV901 , PV-DV910 , PV-DV951 , PV-DV952 , PV-DV953 , PV-DVP8-A , PV-GS12 , PV-GS13 , PV-GS14 , PV-GS15 , PV-GS2 , PV-GS9 , PV-VM202 , PVD-401 , AG-HVX200 , VDR-M10 , VDR-M20 ,
	CGR-B/202A1B / CGR-B/202E1B / CGR-B202A PV-DBP5 / VW-B202 / VW-VBD1 VW-VBD1E	AG-BP15P , AG-BP25 , AG-EZ1 , AG-EZ1U , AG-EZ20 , AG-EZ30P , AG-EZ30U , EZ-1P , GA-EZ20 , NV-DA1EN , NV-DE3 , NV-DJ1 , NV-DJ100 , NV-DL1 , NV-DP1 , NV-DR1 , NV-DS1 , NV-DS1EG , NV-DS1EN , NV-DS5 , NV-DS5EG , NV-DS5EN , NV-DX1 , NV-DX100 , NV-DX100EN , NV-DX110 , NV-DX1EN , PV-D1000 , PV-DBP5 , PV-DV1000 , PV-DV700 , PV-DV710 , PV-DV950 , PV-SD4090 , ZG-EZ30U ,
	CGA-DU06 / CGA-DU06A/1B / CGA-DU07 CGA-DU07A/1B / CGA-DU07E/1B / CGA-DU12 CGA-DU12A/1B / CGA-DU14 / CGA-DU14A/1B CGA-DU14E/1B / CGA-DU21 / CGA-DU21A CGA-DU21A/1B / CGA-DU21E/1B / VW-VBD070 VW-VBD120-H / VW-VBD140 / VW-VBD210	NV-GS10 , NV-GS100K , NV-GS10B , NV-GS10EG , NV-GS10EGA , NV-GS10EGR , NV-GS10EGS , NV-GS120 , NV-GS120B , NV-GS120EG-S , NV-GS120GN-S , NV-GS120K , NV-GS140 , NV-GS140EG-S , NV-GS150 , NV-GS150B , NV-GS150EG-S , NV-GS158GK , NV-GS17 , NV-GS17EF , NV-GS17EF-S , NV-GS180 , NV-GS180EG-S , NV-GS200 , NV-GS200B , NV-GS200EG-S , NV-GS200K , NV-GS21 , NV-GS22 , NV-GS22EG-A , NV-GS22EG-S , NV-GS250 , NV-GS250B , NV-GS250EG-S , NV-GS258GK , NV-GS27 , NV-GS27EF-S , NV-GS27EG-S , NV-GS280 , NV-GS280EG-S , NV-GS28GK , NV-GS30 , NV-GS300 , NV-GS300EG-S , NV-GS30B , NV-GS33 , NV-GS33EG-S , NV-GS35 , NV-GS37 , NV-GS37EB-S , NV-GS37EG-S , NV-GS38GK , NV-GS40 , NV-GS400 , NV-GS400B , NV-GS400EG-S , NV-GS400GN , NV-GS400K , NV-GS408GK , NV-GS40B , NV-GS44 , NV-GS50 , NV-GS500EB-S , NV-GS500EG-S , NV-GS50A , NV-GS50A-S , NV-GS50AW , NV-GS50B , NV-GS50K , NV-GS50V , NV-GS55 , NV-GS55B , NV-GS55EG-S , NV-GS55GN-S , NV-GS55K , NV-GS65 , NV-GS70 , NV-GS70A-S , NV-GS70B , NV-GS70K , NV-GS75 , NV-GS75B , NV-GS75EG-S , NV-GS78GK , NV-MX500A , PV-GS120 , PV-GS150 , PV-GS180 , PV-GS19 , PV-GS200 , PV-GS250 , PV-GS29 , PV-GS300 , PV-GS31 , PV-GS33 , PV-GS34 , PV-GS35 , PV-GS39 , PV-GS400 , PV-GS50 , PV-GS500 , PV-GS50K , PV-GS50S , PV-GS55 , PV-GS59 , PV-GS65 , PV-GS70 , PV-GS75 , VDR-D150 , VDR-D150EB-S , VDR-D150EF-S , VDR-D150EG-S , VDR-D158GK , VDR-D250 , VDR-D250EG-S , VDR-D258GK , VDR-D300EG-S , VDR-D308GK , VDR-D400 , VDR-M30 , VDR-M30K , VDR-M50 , VDR-M50B , VDR-M50EG-S , VDR-M50PP , VDR-M53 , VDR-M55 , VDR-M70 , VDR-M70B , VDR-M70EG-S , VDR-M70K , VDR-M70PP , VDR-M75 , VDR-M95 , NV-GS500 , NV-GS300 , VDR-D300 , VDR-D200 , SDR-H280 , SDR-H250 , SDR-H20
	CGR-V620 / V26S	NV-RS7 , NV-RX , NV-RX14 , NV-RX17 , NV-RX18 , NV-RX24 , NV-RX27 , NV-RX57 , NV-RX64 , NV-RX67 , NV-RZ , NV-RZ1 , NV-RZ10 , NV-RZ10EN , NV-RZ10ENA , NV-RZ10F , NV-RZ2 , NV-RZ9ENC , NV-RZ9ENU , NV-VS37A , NV-VS4 , NV-VS40 , NV-VS50 , NV-VS7 , NV-VX24 , NV-VX27 , NV-VX37EN , NV-VX44 , NV-VX47 , NV-VX54 , NV-VX57 , NV-VX9EU , NV-VZ1 , NV-VZ10EN , NV-VZ10ENA , NV-VZ10ENC , NV-VZ10ENH , NV-VZ17 , NV-VZ9EN , NV-Z1EN ,
	VW-VBG130 (須搭配專用充電器)	NV-GS50K , NV-GS55K , NV-GS70K , NV-GS100K , NV-GS120K , NV-GS150 , NV-GS250 , NV-GS300 , NV-GS320 , NV-GS400K , VDR-D250 , VDR-D300 , VDR-D310 , VDR-D400 , VDR-M30K , VDR-M70K , VDR-M95 , SDR-H60 , SDR-H40 , HDC-HS110 , SDR-H50 , HDC-TM200 , HDC-HS20 , HDC-SD20 , TM350
VW-VBG260 (須搭配專用充電器) 亦可通用130的電池	HDC-HS9 , HDC-DX1 , HDC-DX3 , HDC-SX5 , HDC-SD1 , HDC-SD3 , HDC-SD5 , HDC-SD7 , HDC-SD9 , HDC-HS100 , HDC-SD100 , SDR-H80 , HDC-TM300 , HDC-HS300 , HDC-HS200 , HDC-SD200 , HDC-HS110 , SDR-H50 , HDC-TM200 , HDC-HS20 , HDC-SD20 , DC-HS350	
VW-VBK180 / VW-VBK260	SDR-H85 , HDC-HS60 , HDC-SD60 , SDR-S45 , SDR-S50	
DMW-BLA13	DMC-L10 ,	
DMW-BLB13	DMC-G1 , DMC-GH1 , DMC-GF1	
DMW-BCG10	DMC-TZ7 , ZS-3 , ZR-1 , DMC-TZ10 , DMC-TZ8 , DMC-ZR3 , ZX1 , ZS1 , TZ6 , TZ65 , ZX7	
DMW-BCF10	DMC-FT1 , DMC-FS7 , DMC-FS6 , DMC-FS25 , DMC-FX550 , DMC-FX40 , DMC-FX48 , DMC-FX580 , TS-1 , DMC-FS12 , DMC-FS15 , DMC-FS4 , DMC-FS42 , DMC-FS62 , DMC-FX550 , , DMC-FX60 , DMC-FX65 , FP8 , DMC-TS2 , DMC-FX66 , DMC-FX68 , DMC-F3	
DMW-BCH7	Lumix DMC-FP1 , Lumix DMC-FP1A , Lumix DMC-FP1EB-A , Lumix DMC-FP1EB-D , Lumix DMC-FP1EB-K , Lumix DMC-FP1EB-P , Lumix DMC-FP1G , Lumix DMC-FP1H , Lumix DMC-FP1K , Lumix DMC-FP1P Lumix DMC-FP1R , Lumix DMC-FP1S , Lumix DMC-FP2 , Lumix DMC-FP2H , Lumix DMC-FP2R , Lumix DMC-FP3 , Lumix DMC-FP3A , Lumix DMC-FP3K	